



Detail Location

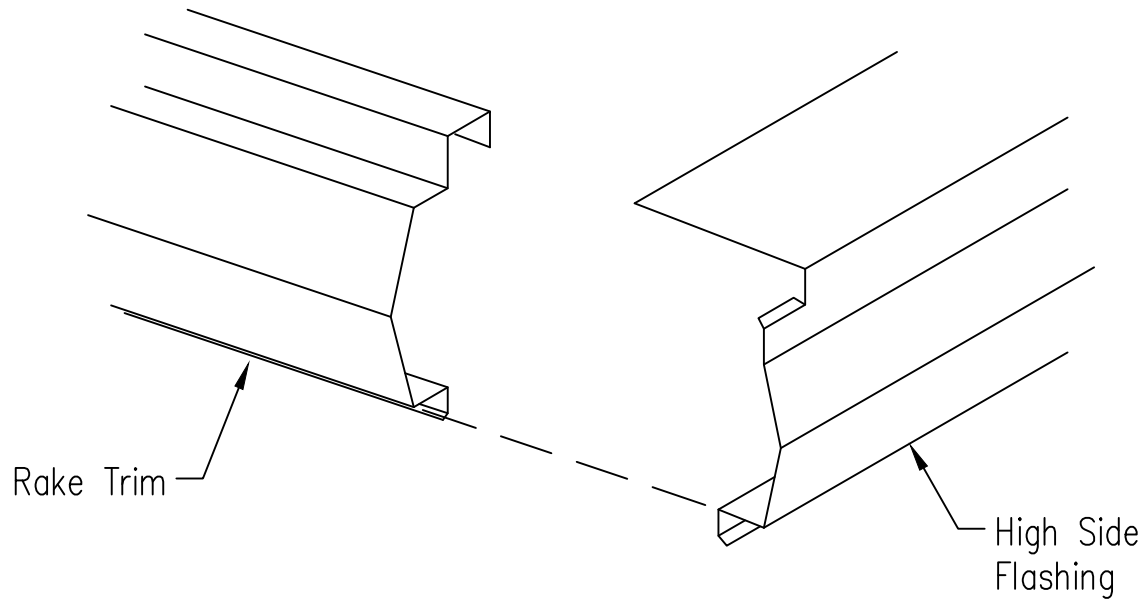

Rake Trim

High Side  
Flashing

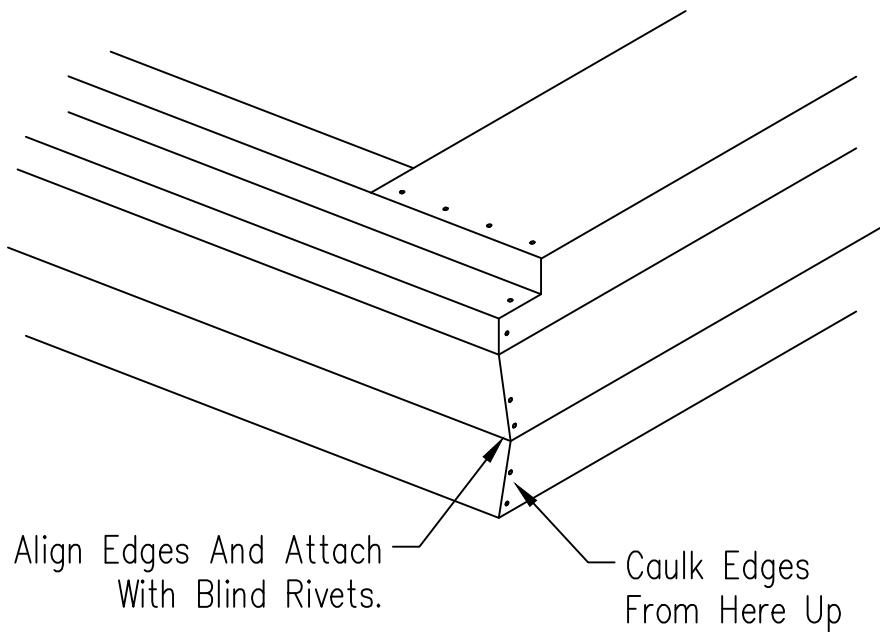

Align Edges And Attach  
With Blind Rivets.

Caulk Edges  
From Here Up

- 1.) Align mitered edges of rake and high side flashing.  
attach with blind rivets (Fastener #14).  
make sure all edges are sealed with tube sealant.