
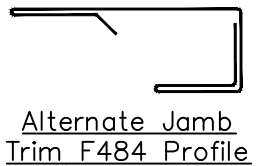


PBR Wall Panel - Three Sided Framed Opening Jamb Trim Installation

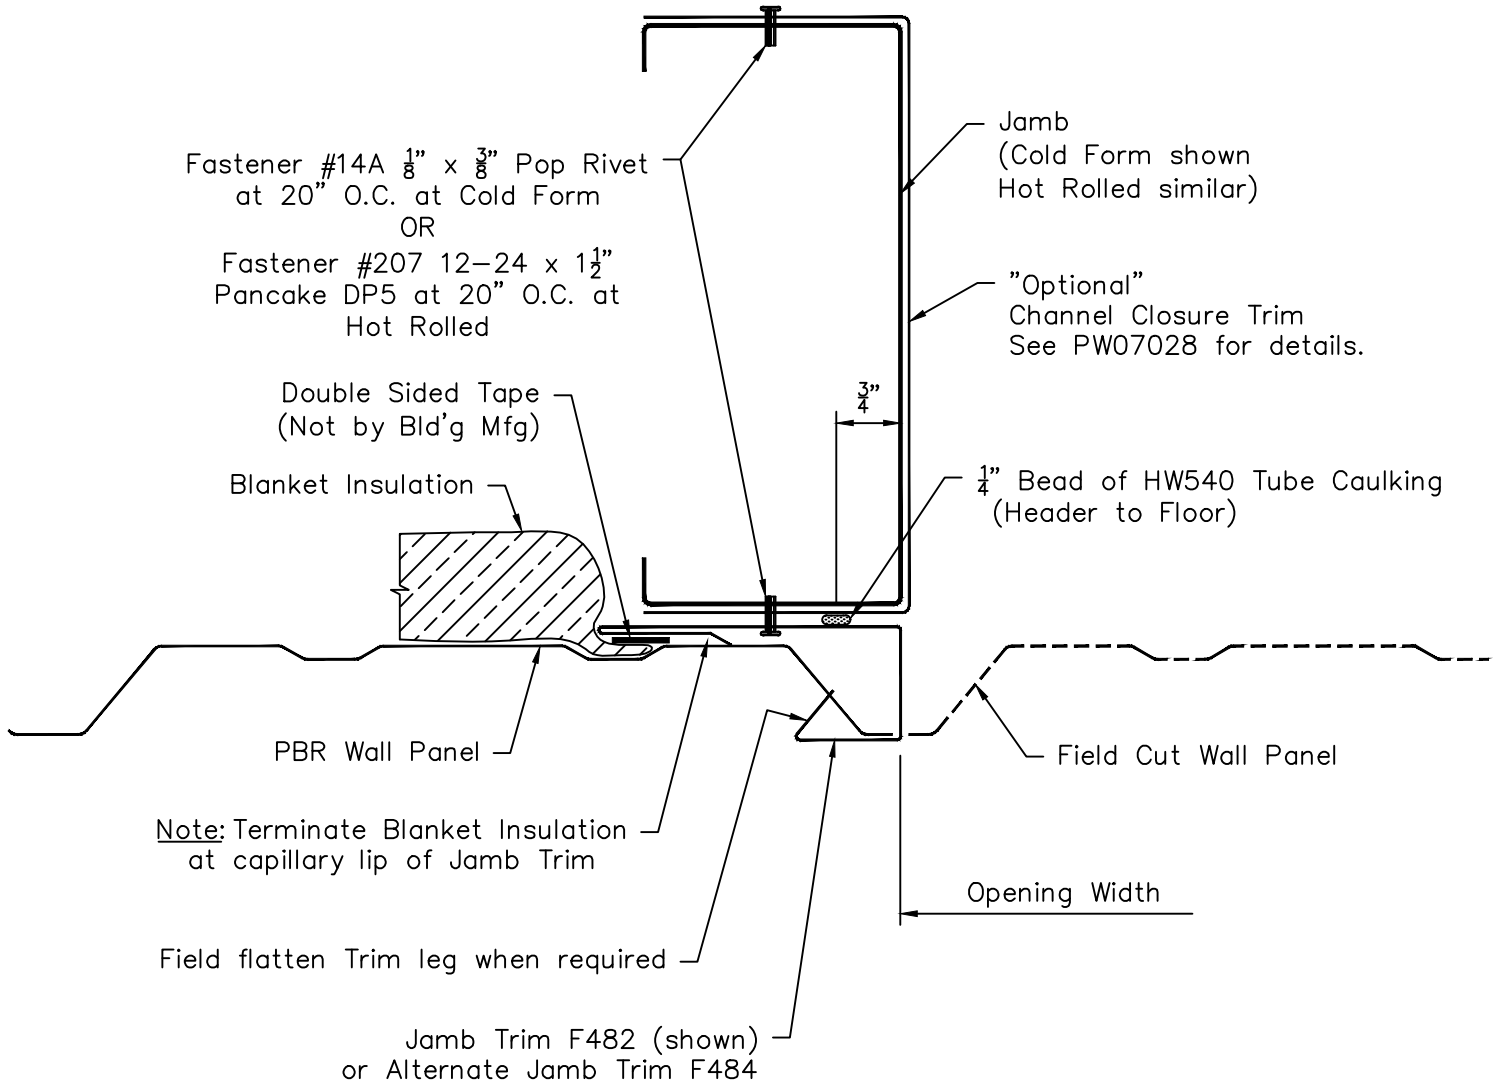

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.

Note: Panel position is shown with Panel Rib and Opening on 1'-0 module. Location of Rib may vary depending on the Opening Width and location. Field measure before cutting Panel and Trim.