



PBR Wall Panel - Walk Door & Glass-Front Walk Door

Field Notch and Bend Tabs at Head Trim

Note: Trim Installation can be done by Field Notch Panel as shown on PW09022 & PW09023 OR with Field Notch and Bend Tabs at Head Trim as shown on PW09024 & PW09025.

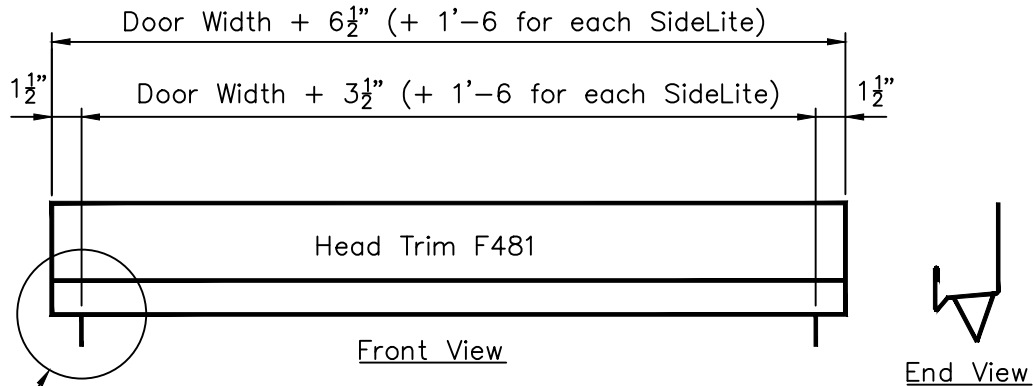

See End Cut Detail

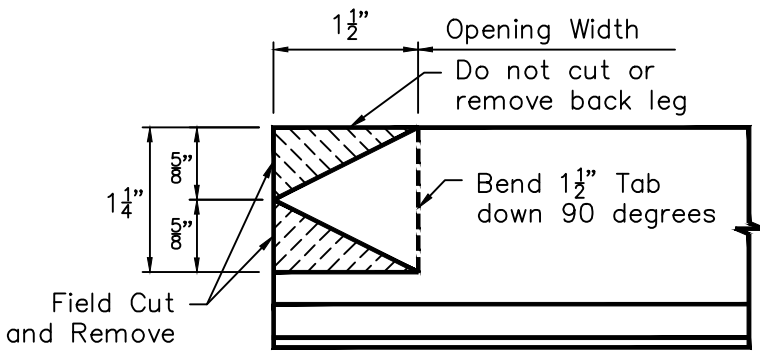

Note: All trim is to be installed BEFORE blanket insulation is applied to walls

Note: Panel position is shown with Panel Rib and Door on 1'-0 module. Location of Rib may vary depending on the Door Width and location. Field measure before cutting Panel and Trim.

