
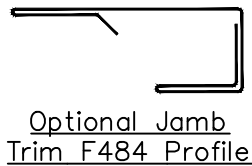


PBR Wall Panel - Preassembled Walk Door & Glass-Front Walk Door Jamb Trim Installation

Page
PW09029

Date
Dec '11

Rev.
00

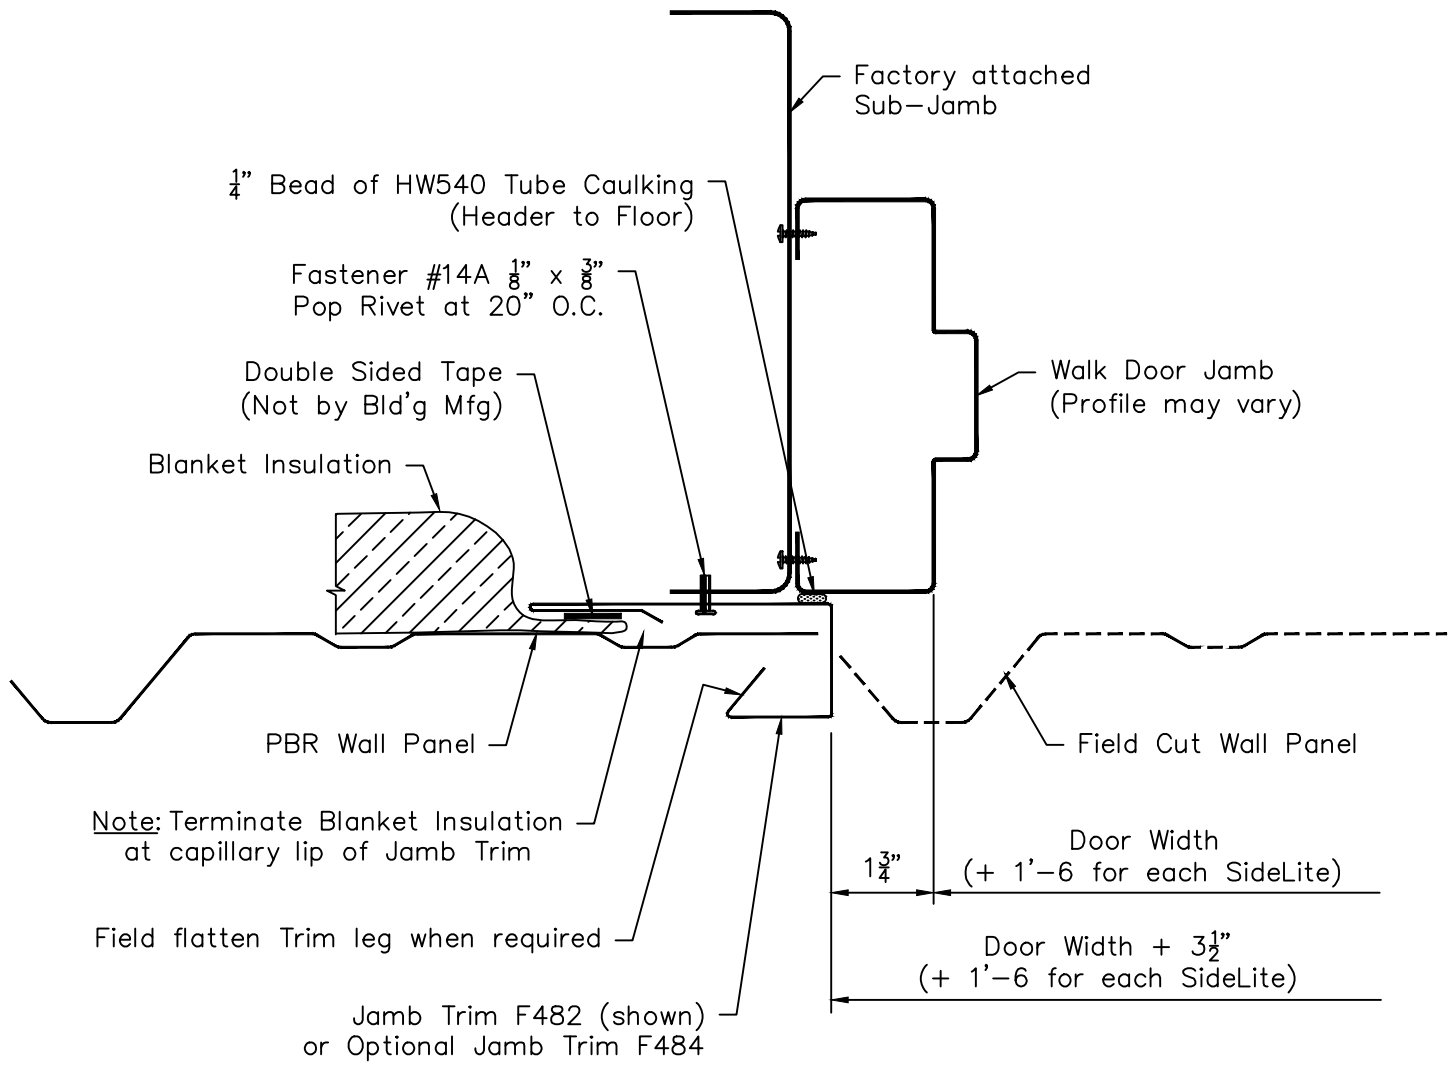

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.

Note: Panel position is shown with Panel Rib and Door on 1'-0" module. Location of Rib may vary depending on the Door Width and location. Field measure before cutting Panel and Trim.