



ShadowRib Inside Corner

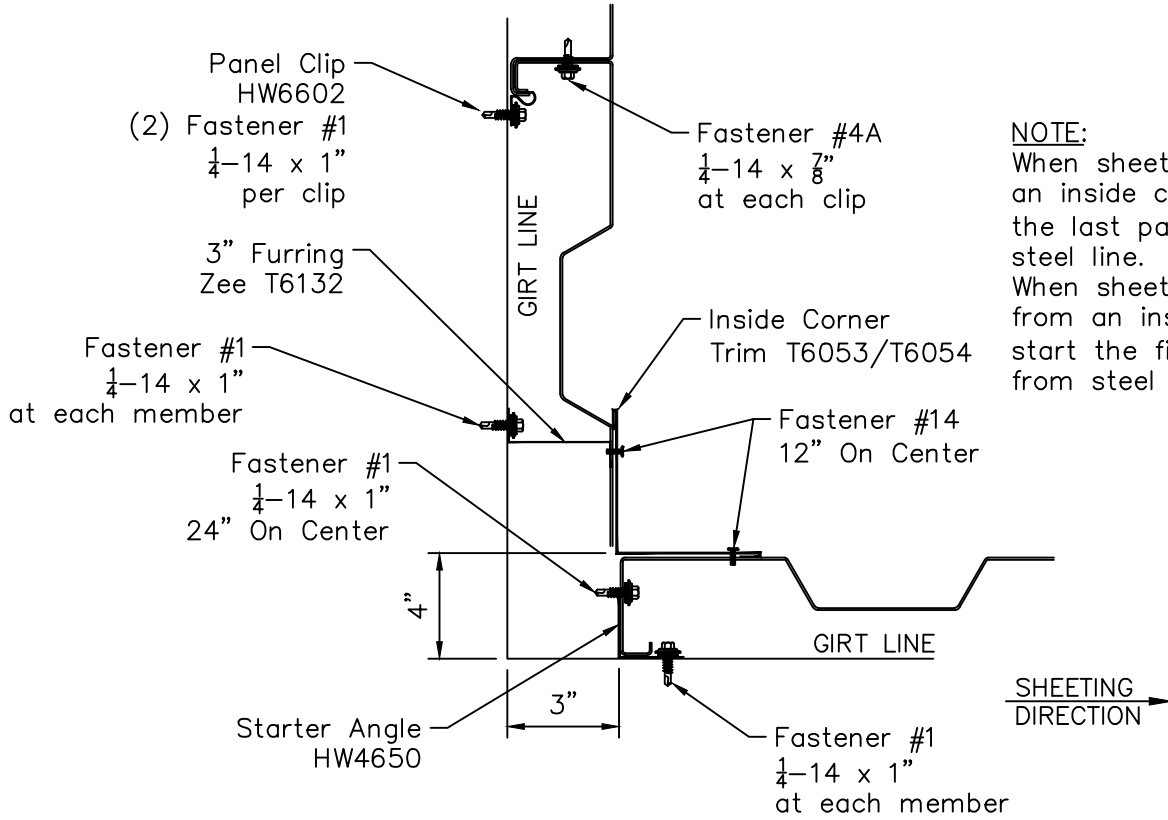

NOTE:
When sheeting toward an inside corner stop the last panel 4" from steel line.
When sheeting away from an inside corner start the first panel 3" from steel line.

Finish In High

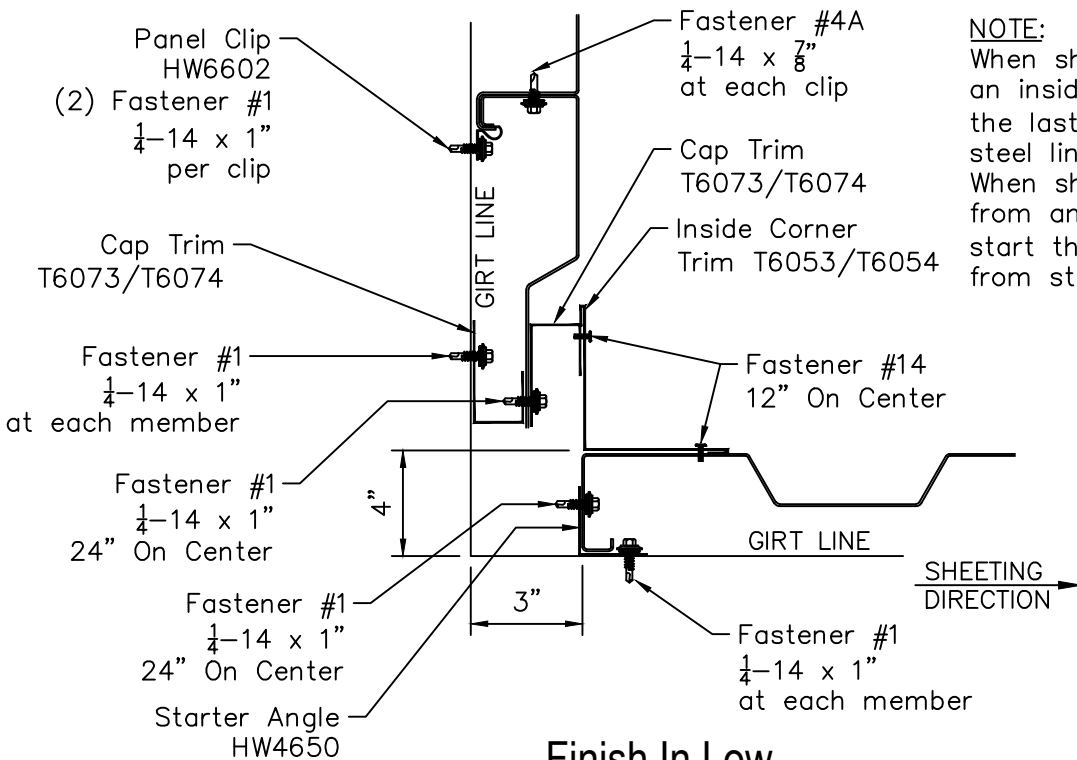

NOTE:
When sheeting toward an inside corner stop the last panel 4" from steel line.
When sheeting away from an inside corner start the first panel 3" from steel line.

Finish In Low