


# AVP / PBA Wall Panel Inside Corner Trim

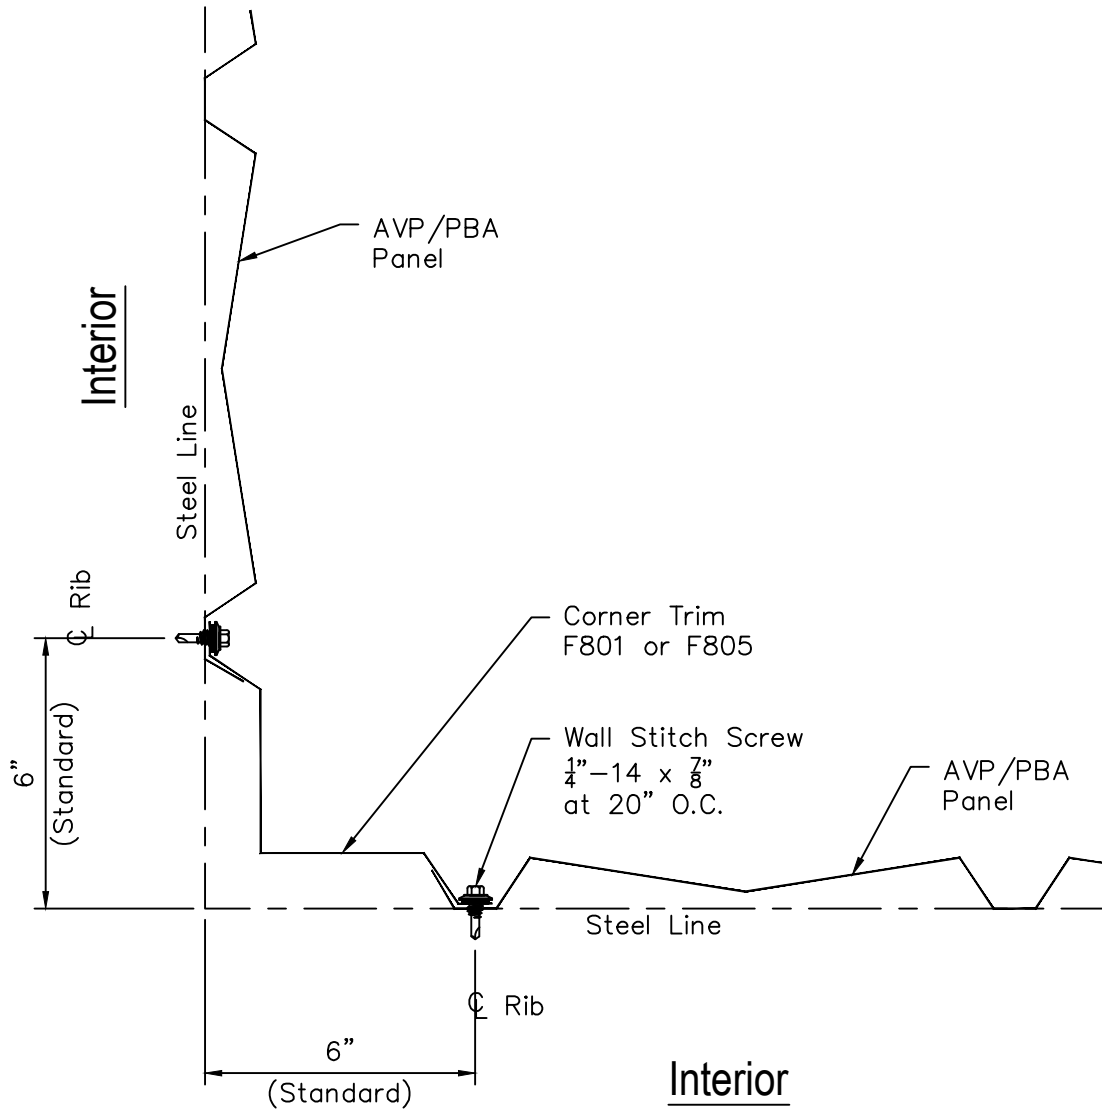

Note:

Standard panel location for Start and End panels is 6" from steel line to C of panel rib. Refer to Erection Drawings for panel location and Corner Trim piece mark.