


# AVP / PBA Wall Panel - Four Sided Framed Opening Trim Installation with Field Notch and Bend Tabs at Head Trim

**Note:** Trim Installation can be done by Field Notch Panel as shown on PA06022 & PA06023  
OR with Field Notch and Bend Tabs at Head Trim as shown on PA06024 & PA06025.

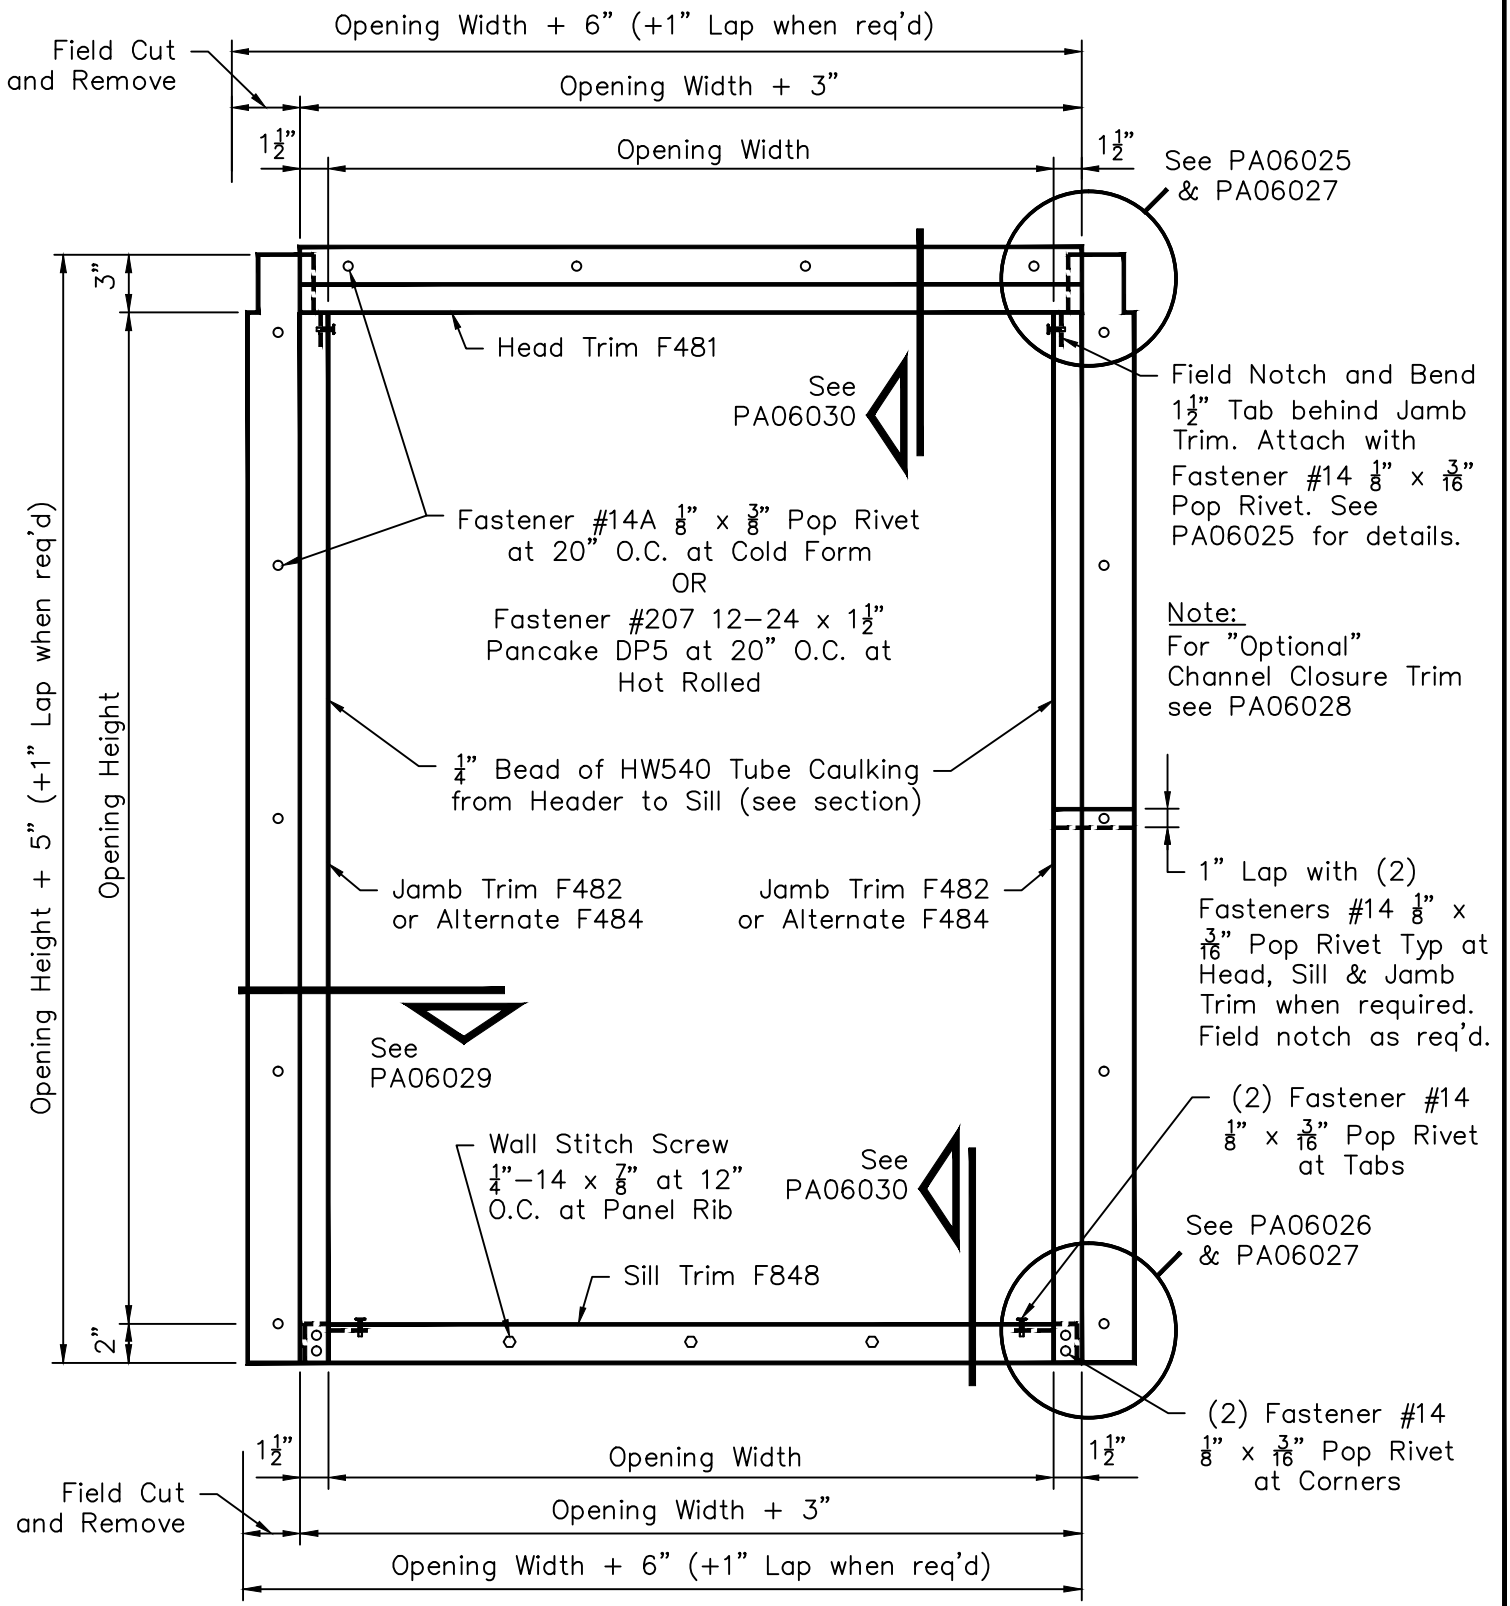

**Note:** All trim is to be installed BEFORE blanket insulation is applied to walls.

**Note:** Field measure Opening Width and Height before making field cuts and adjust cut dimensions accordingly.