

AVP / PBA Wall Panel - Three Sided Framed Opening


Trim Installation with Field Notch and Bend Tabs at Head Trim

Page
PA07024

Date
Mar '13

Rev.
01

Note: Trim Installation can be done by Field Notch Panel as shown on PA07022 & PA07023
OR with Field Notch and Bend Tabs at Head Trim as shown on PA07024 & PA07025.

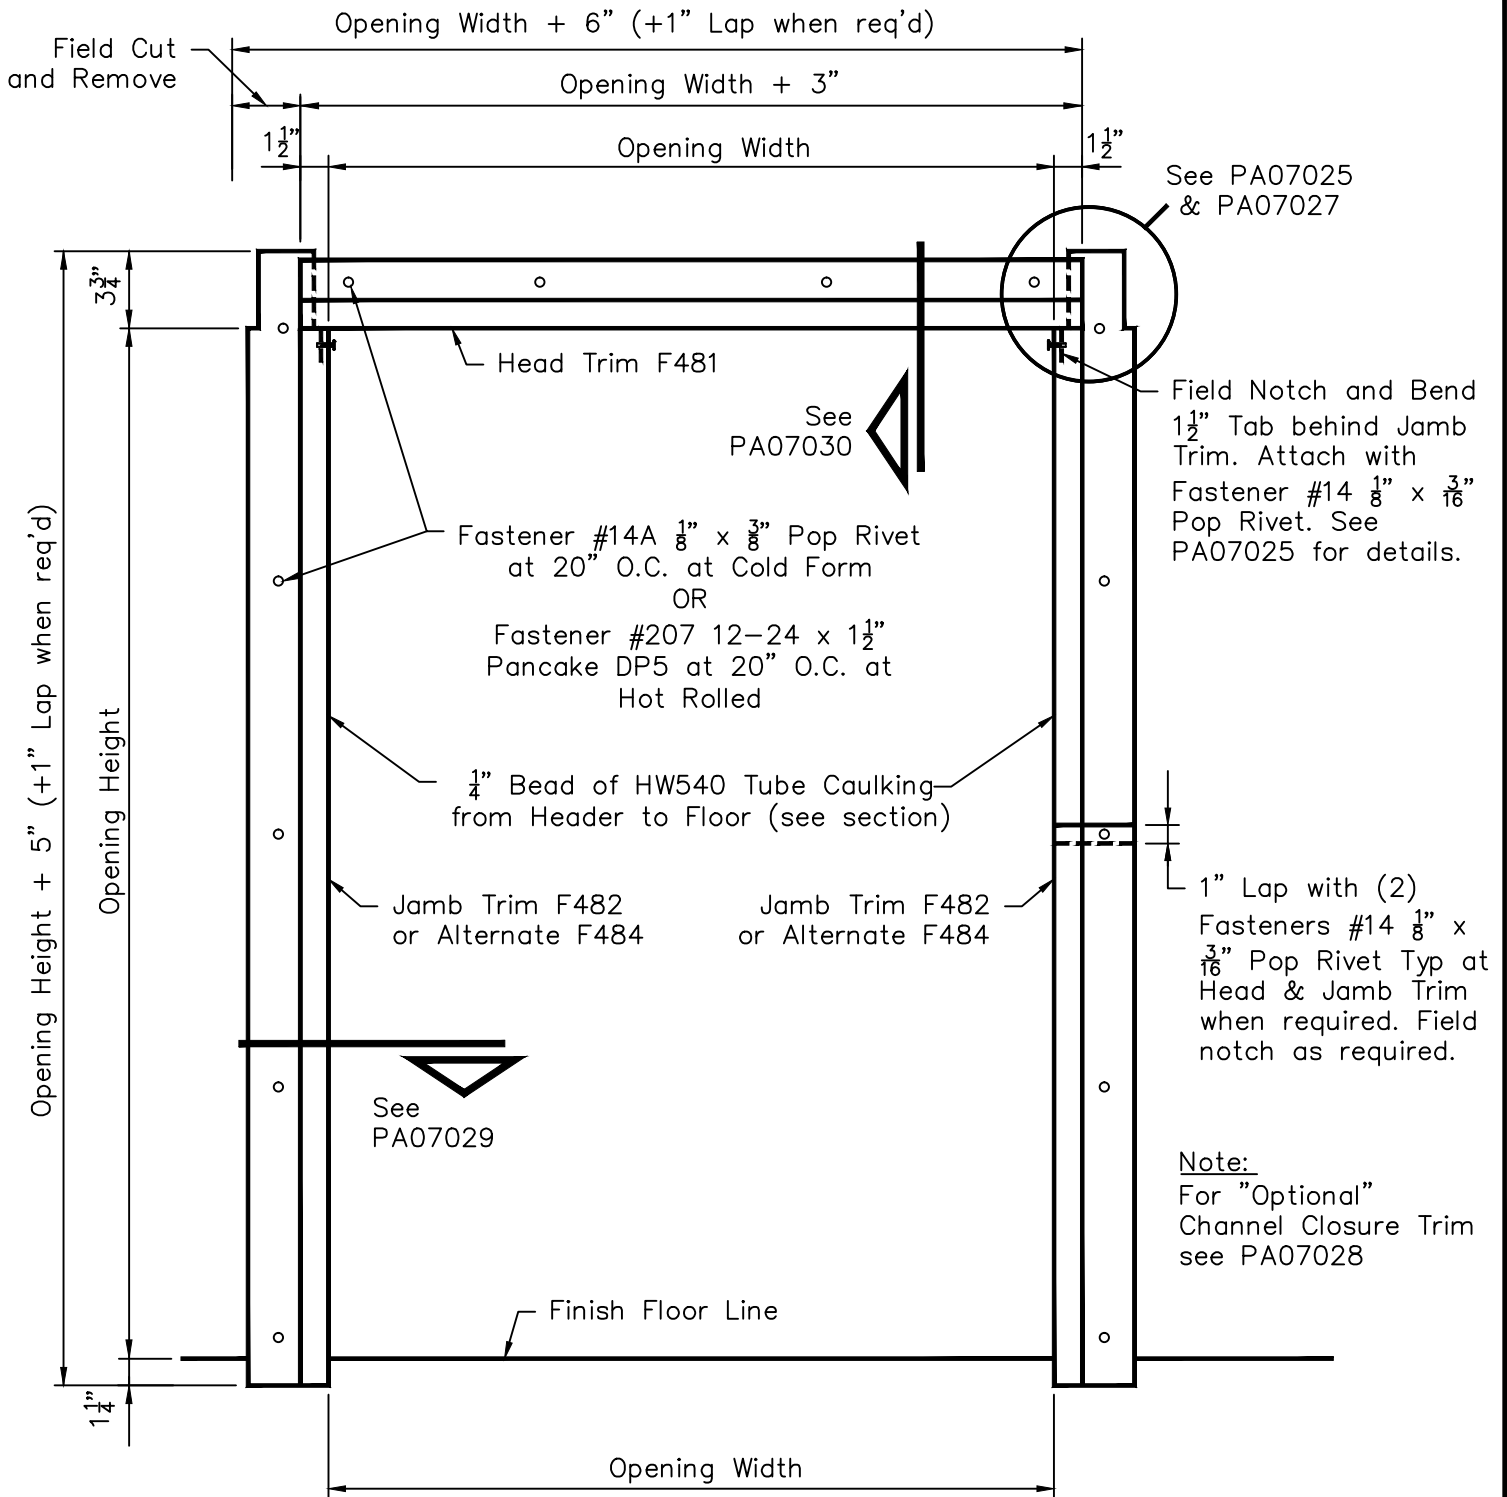

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.

Note: Field measure Opening Width and Height before making field cuts and adjust cut dimensions accordingly.