
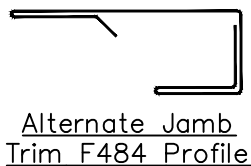


AVP / PBA Wall Panel - Three Sided Framed Opening Jamb Trim Installation

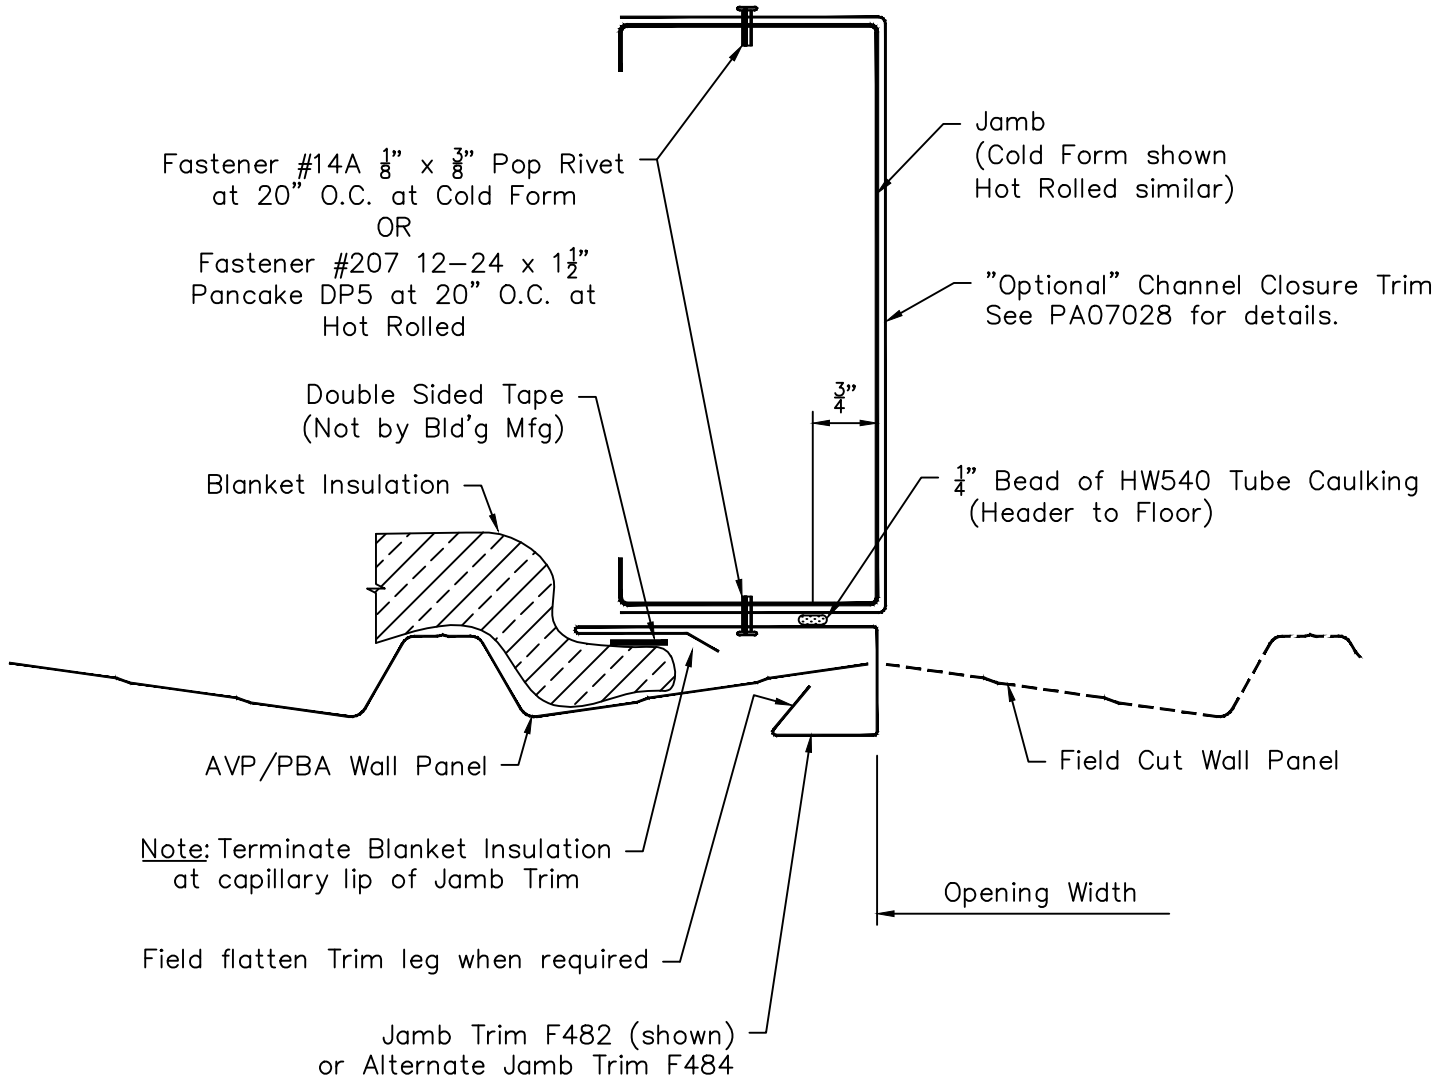

Note: All trim is to be installed BEFORE blanket insulation is applied to walls

Note: Panel position is shown with Panel Rib starting 6" from Steel Line and Opening on 1'-0 module. Location of Panel Rib may vary depending on the Opening Width and location. Field measure before cutting Panel and Trim.