


AVP / PBA Wall Panel - Three Sided Framed Opening Head Trim Installation

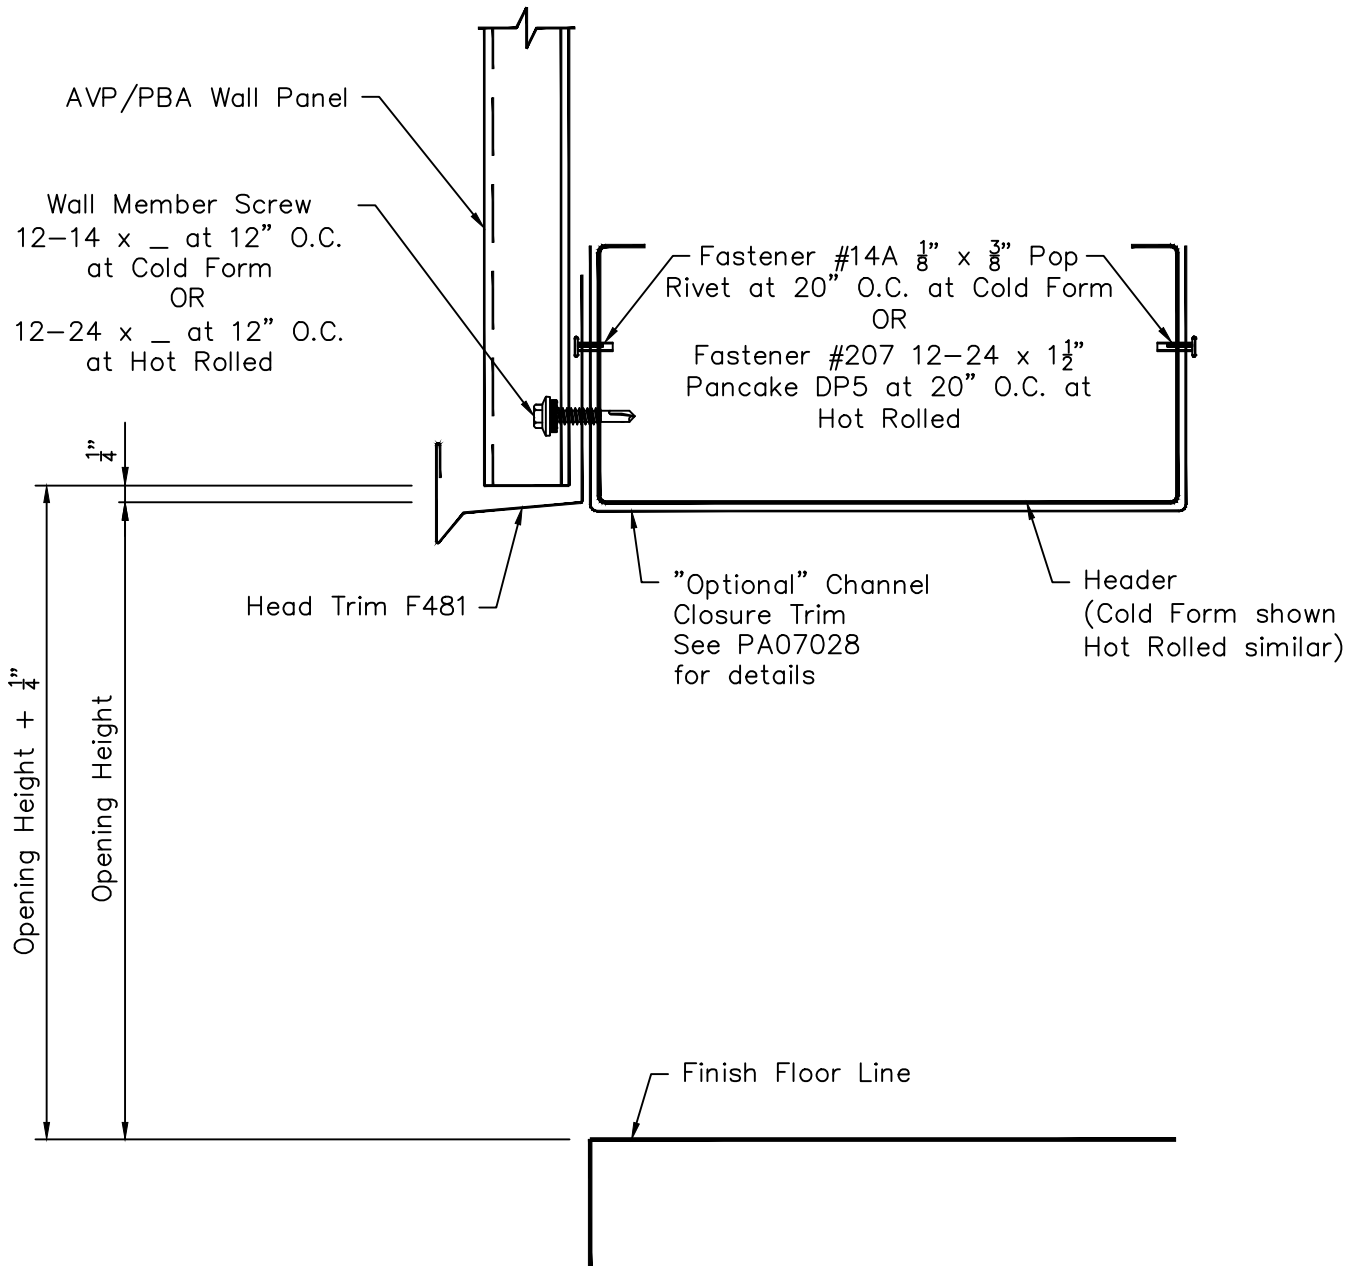

Note: All trim is to be installed BEFORE blanket insulation is applied to walls