


AVP / PBA Wall Panel - Walk Door & Glass-Front Walk Door Trim Installation with Field Notch and Bend Tabs at Head Trim

Note: Trim Installation can be done by Field Notch Panel as shown on PA09022 & PA09023
OR with Field Notch and Bend Tabs at Head Trim as shown on PA09024 & PA09025.

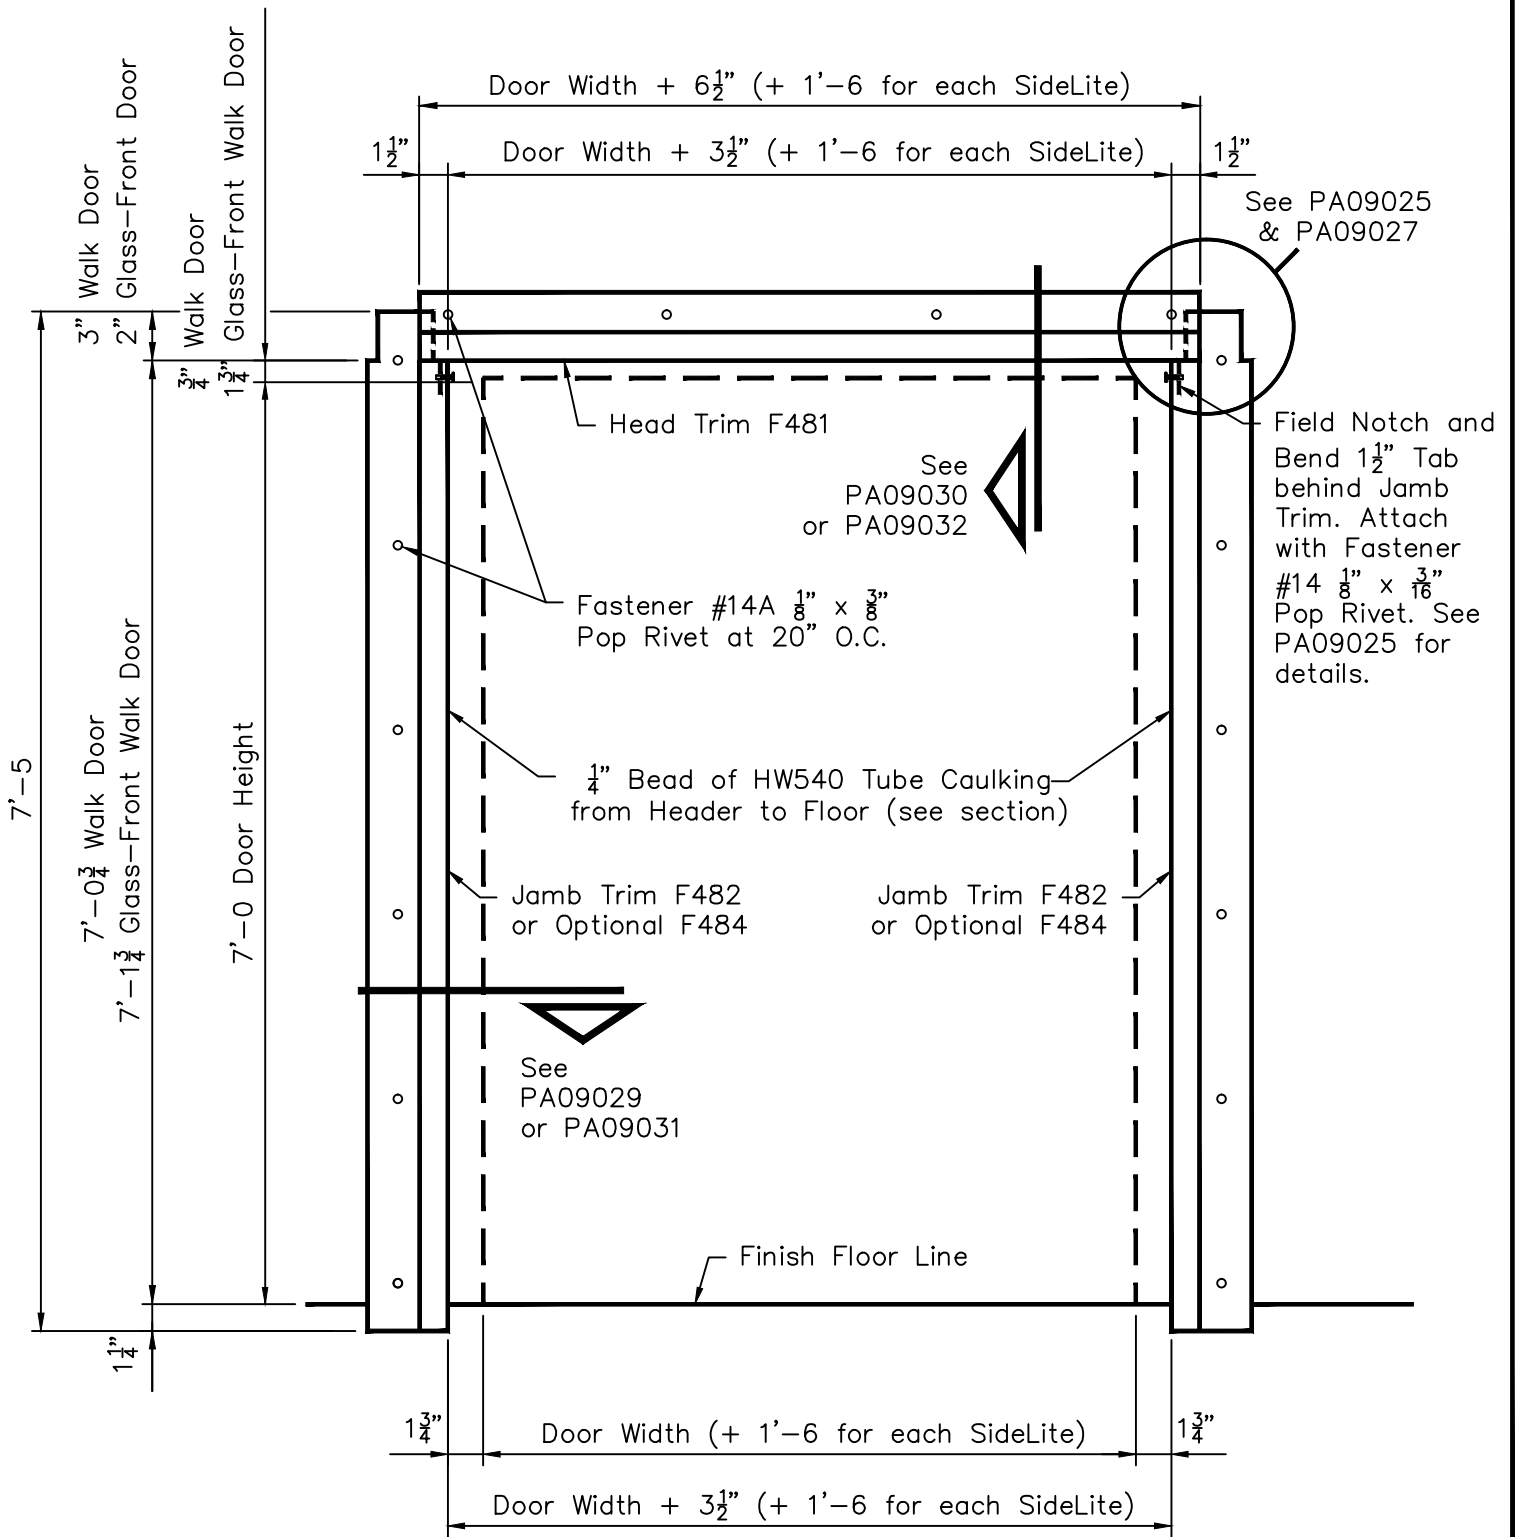

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.

Note: Field measure Door Width and Height before making field cuts and adjust cut dimensions accordingly.