
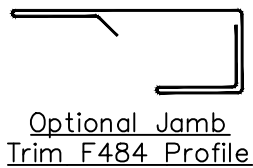


AVP/PBA Panel - Preassembled Walk Door & Glass-Front Walk Door Jamb Trim Installation

Page **PA09029**
Date **Mar '13** Rev. **01**

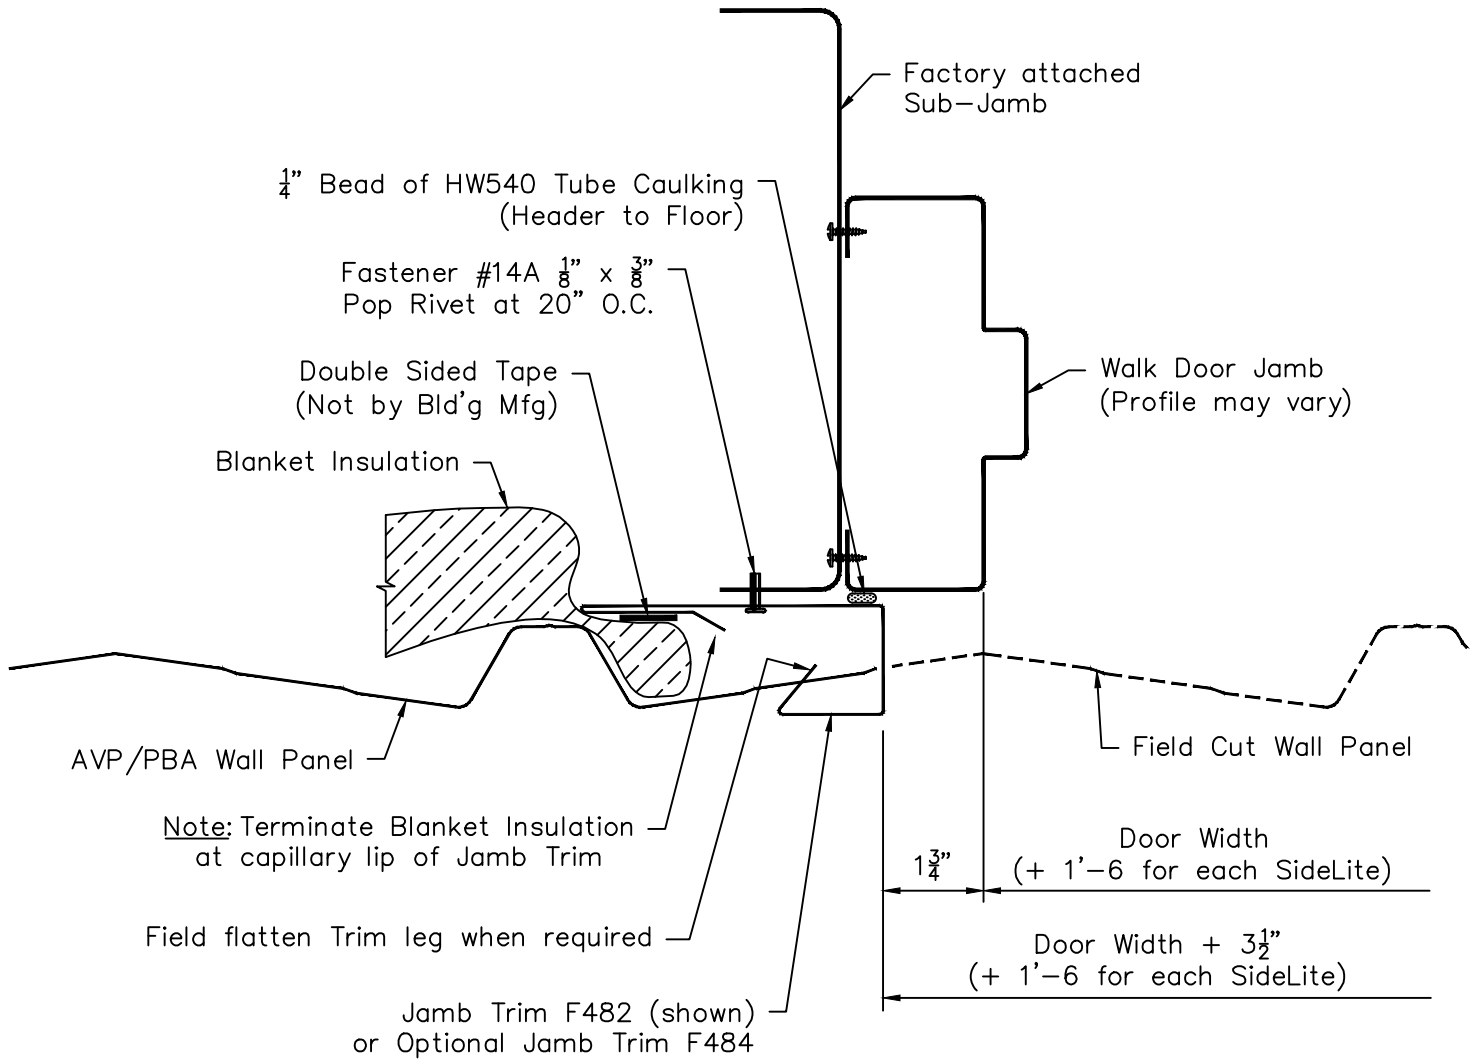

Note: All trim is to be installed BEFORE blanket insulation is applied to walls

Note: Panel position is shown with Panel Rib starting 6" from Steel Line and Door on 1'-0" module. Location of Panel Rib may vary depending on the Door Width and location. Field measure before cutting Panel and Trim.