
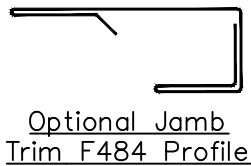


# AVP / PBA Wall Panel - Knock Down Walk Door Jamb Trim Installation

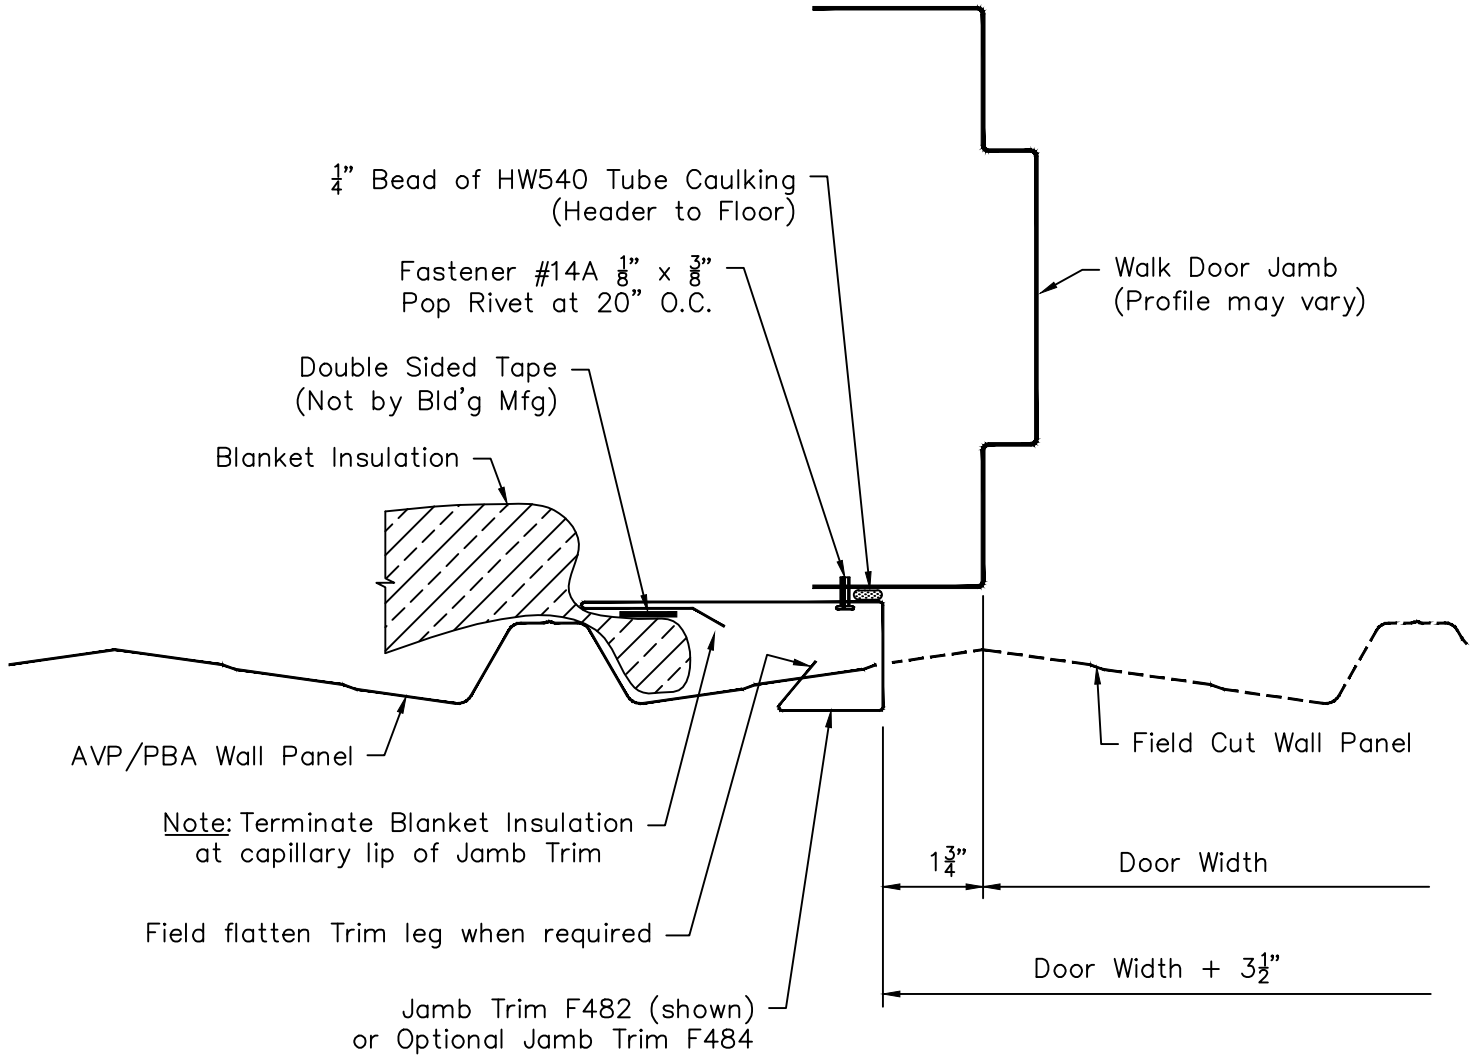

**Note:** All trim is to be installed BEFORE blanket insulation is applied to walls

**Note:** Panel position is shown with Panel Rib starting 6" from Steel Line and Door on 1'-0" module. Location of Panel Rib may vary depending on the Door Width and location. Field measure before cutting Panel and Trim.