


# AVP / PBA Wall Panel - Knock Down Walk Door Head Trim Installation

Page  
**PA09032**

Date  
**Mar '13**

Rev.  
**01**

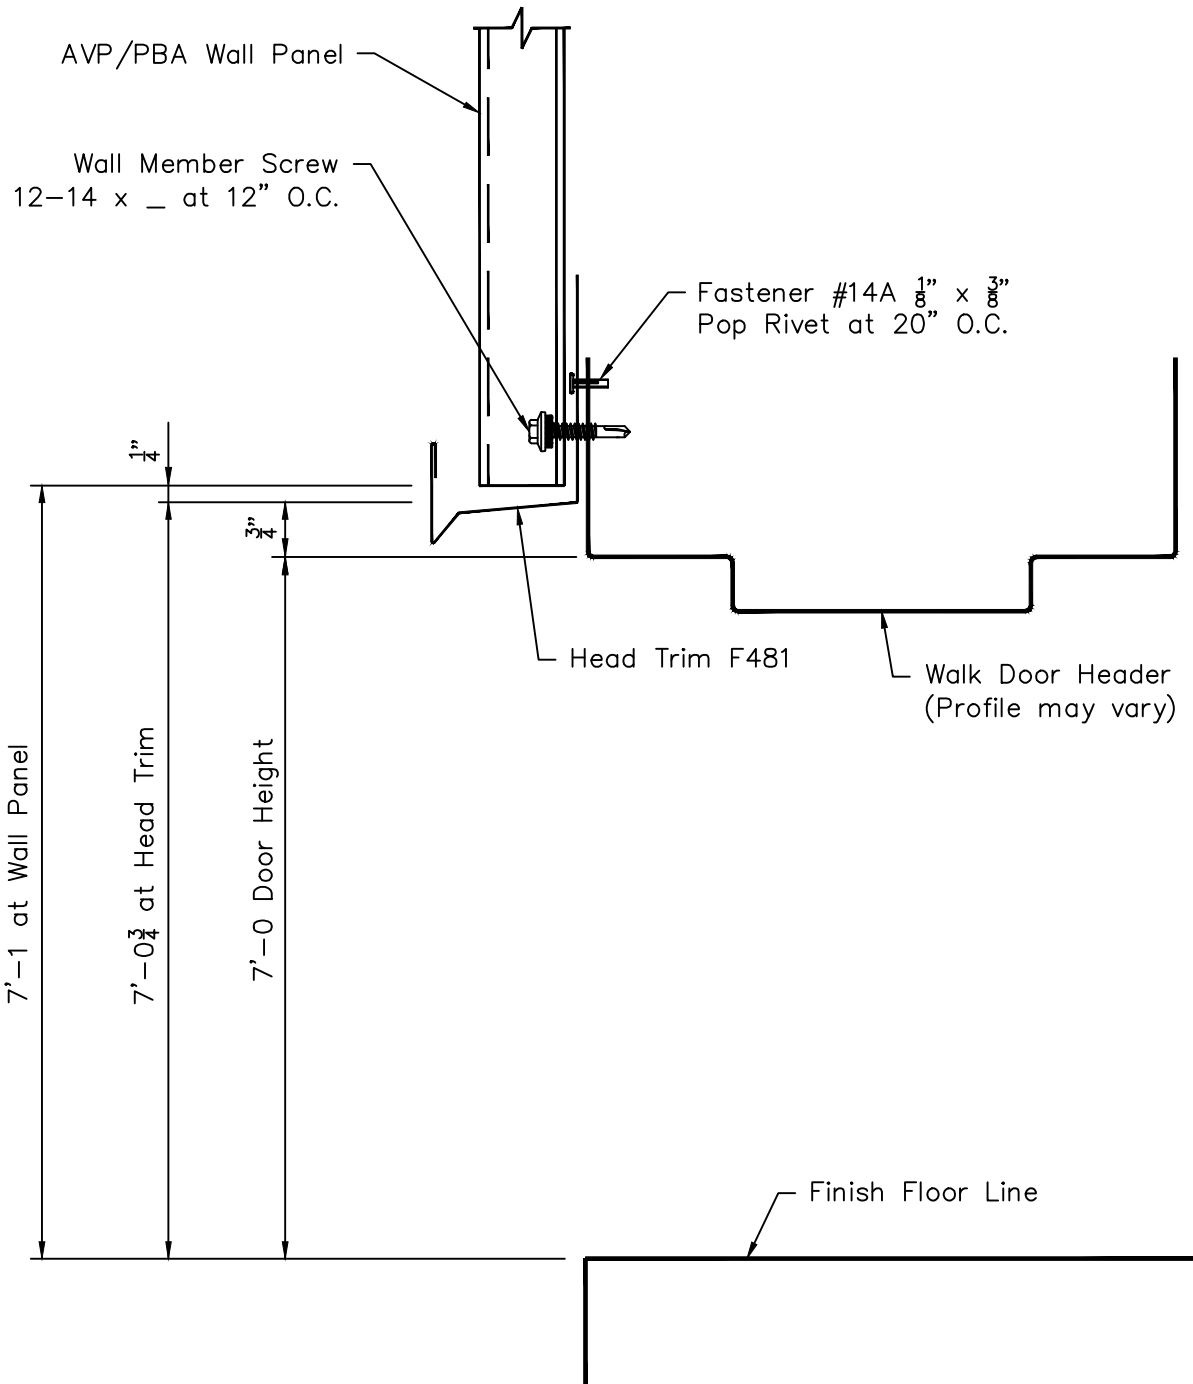

**Note:** All trim is to be installed BEFORE blanket insulation is applied to walls.