

PBR Wall Panel - Three Sided Framed Opening


Trim Installation with Field Notch and Bend Tabs at Head Trim

Page
PW07024

Date
Jan '12

Rev.
00

Note: Trim Installation can be done by Field Notch Panel as shown on PW07022 & PW07023
OR with Field Notch and Bend Tabs at Head Trim as shown on PW07024 & PW07025.

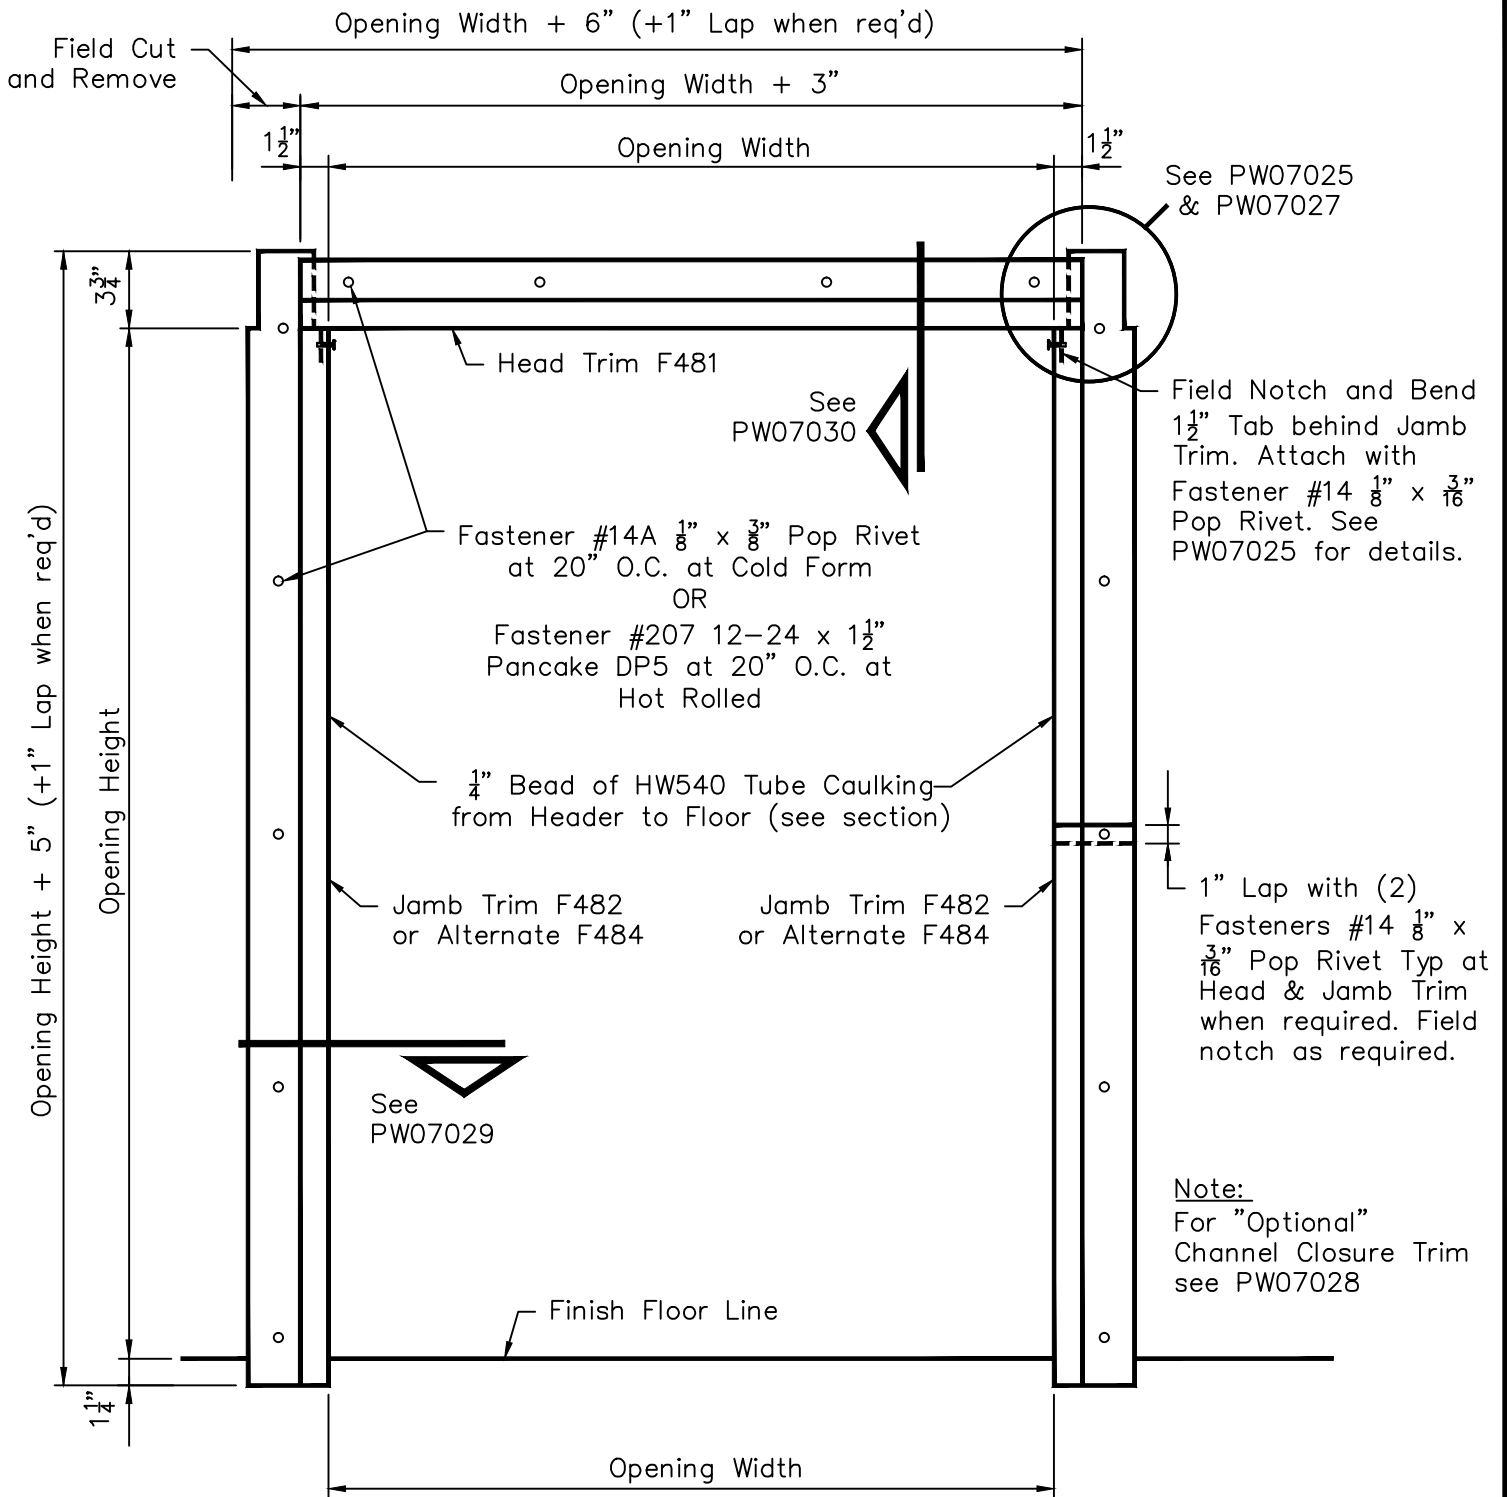

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.

Note: Field measure Opening Width and Height before making field cuts and adjust cut dimensions accordingly.