


PBR Wall Panel - Preassembled Walk Door & Glass-Front Walk Door Head Trim Installation

Page
PW09030

Date
Dec '11

Rev.
00

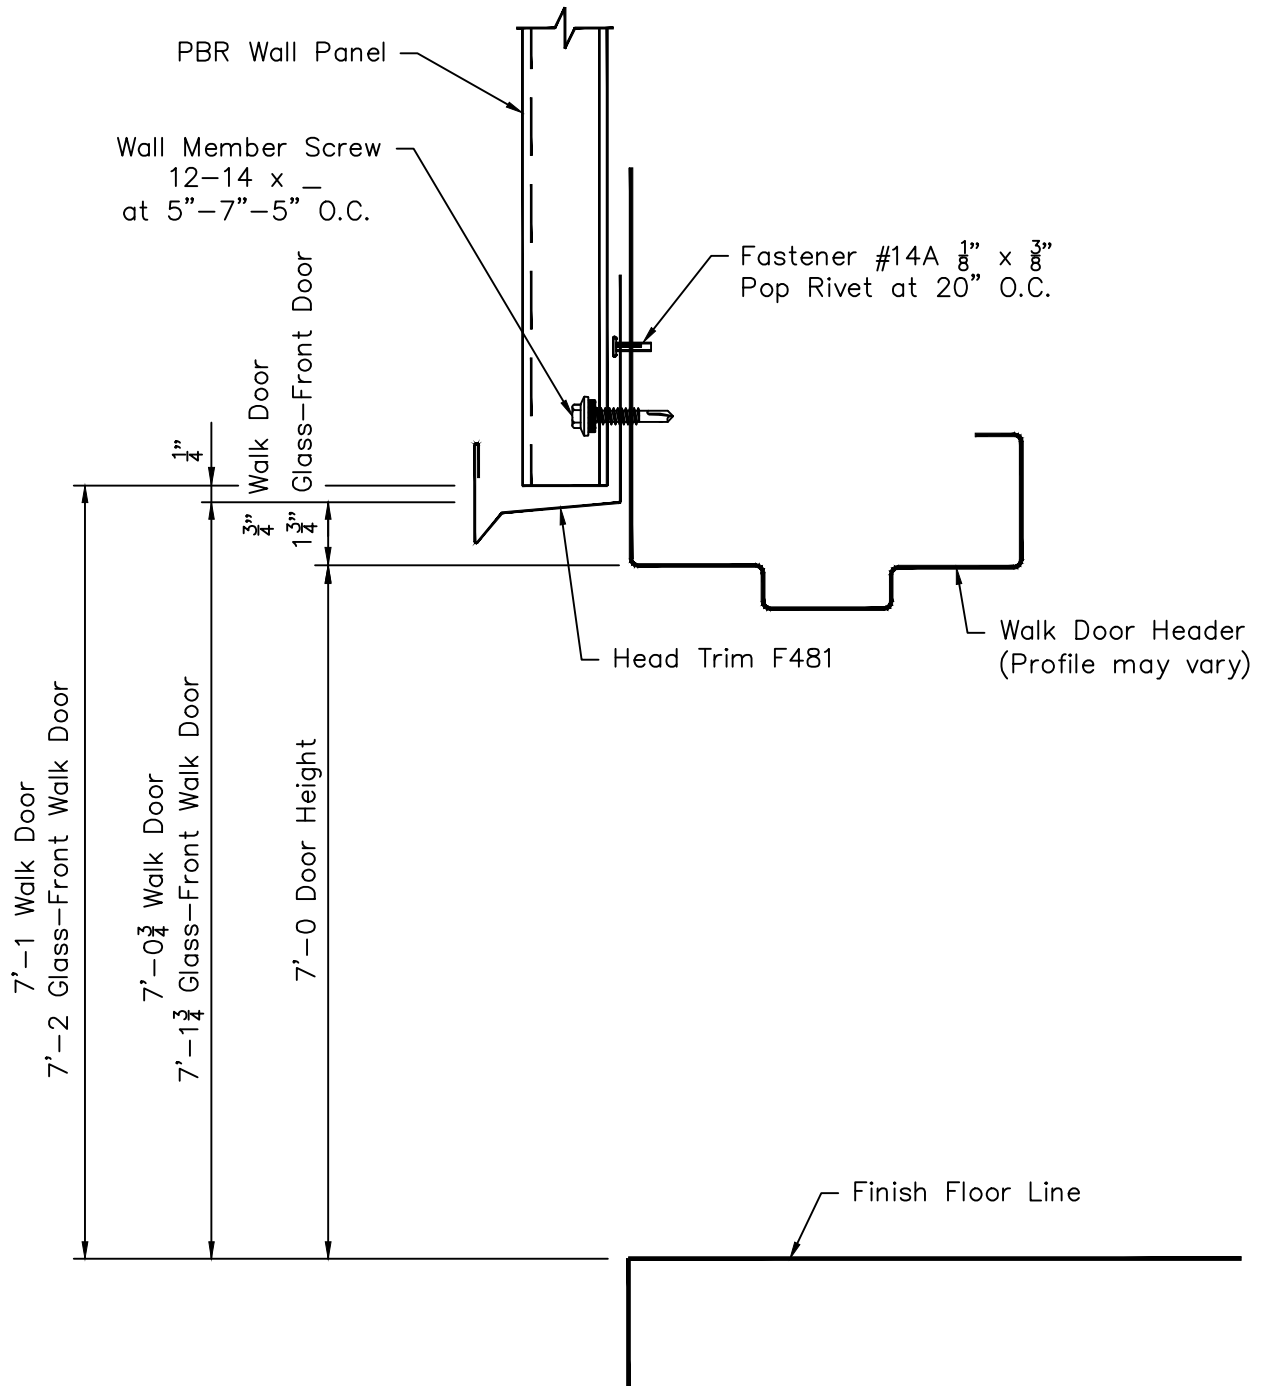

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.