


PBR Wall Panel - Knock Down Walk Door Head Trim Installation

Page
PW09032
Date
Dec '11 Rev.
00

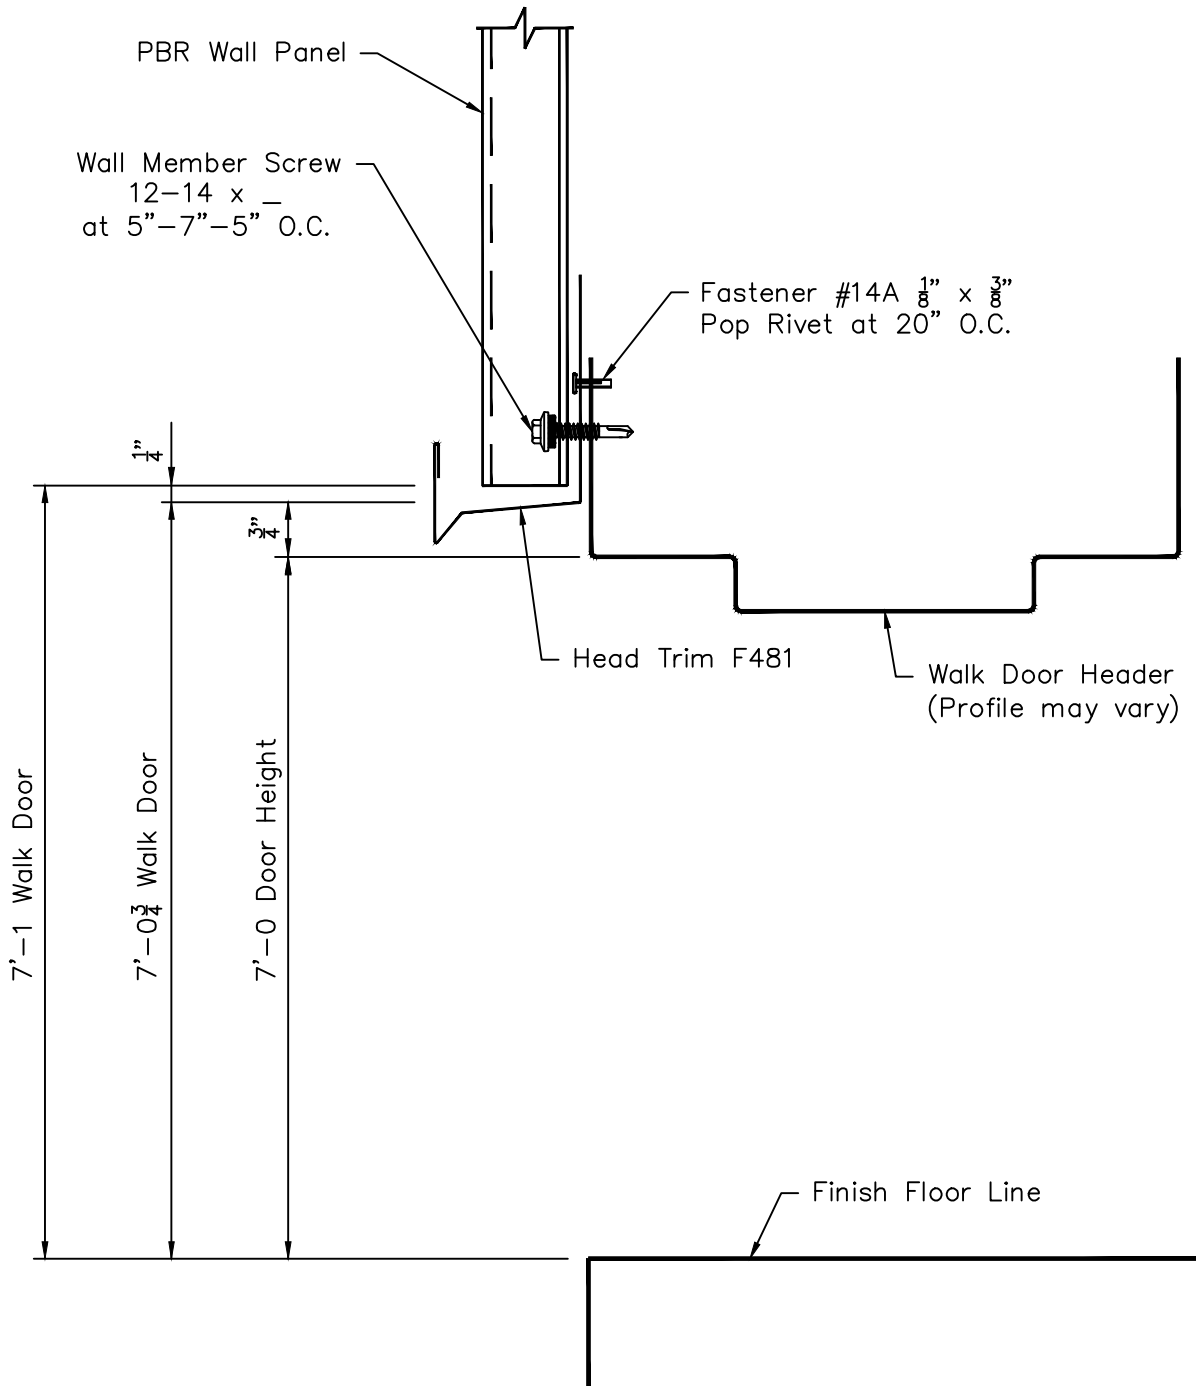

Note: All trim is to be installed BEFORE blanket insulation is applied to walls.